



**6213 GRIFF WS AB 08-2002**

*Nur von Fachwerkstatt zu montieren  
only to be fitted by specialist workshop  
à ne faire monté que par un garage (atelier) spécialisé  
mag alleen door een vakman worden gemonteerd*



1




2



3



4

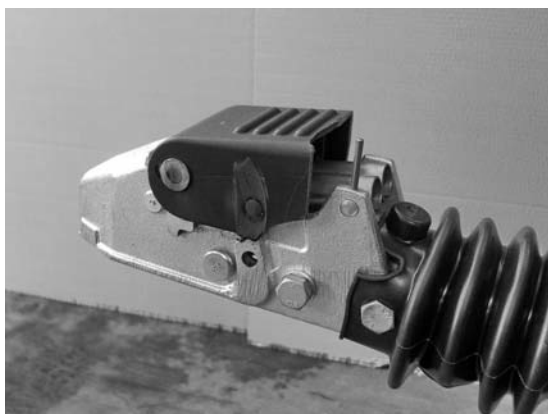

5



6



7



8



**6213 GRIFF WS AB 08-2002**



9



10



11



12



13



14




15




16




**6213 GRIFF WS AB 08-2002**

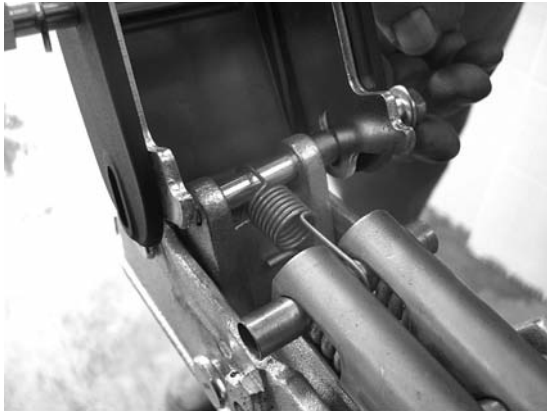

17

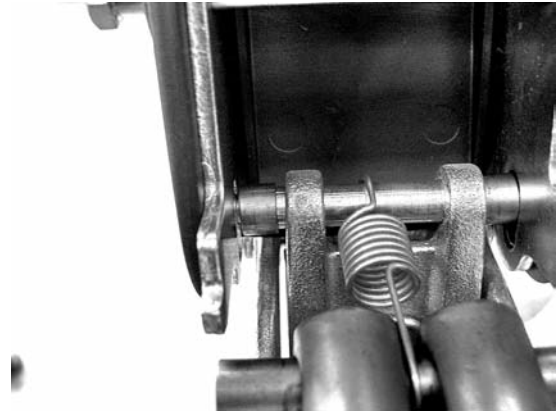

18

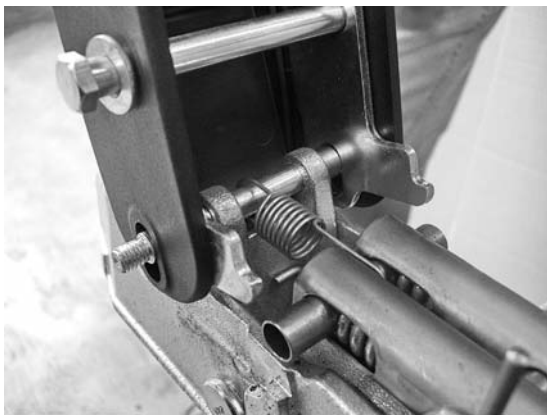

19



20



21



22



23



24



**6213 GRIFF WS AB 08-2002**



25



26



27



28



29



30



31



32



**6213 GRIFF WS AB 08-2002**



33




34



35



36

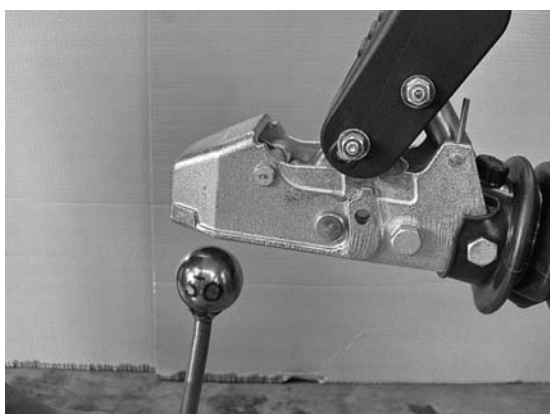

37



38



39



40